


Introduction of each part:

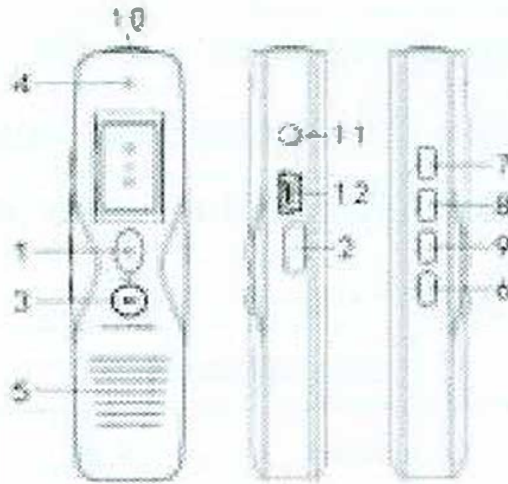

(1) REC

(2) Power switch

(3) Play/Pause

(4) Indicator light

(5) Loudspeaker

(6) MENU“M”

(7) Volume“V”/mode switch

(8) PREV (9) NEXT

(10) Microphone

(11) Headset jack

(12) USB interface

Battery power display

*Start battery displays in the bottom right

corner; *Battery symbol displays in the bottom right corner.

*Put the power switch in ON position. Full

power



Half power



Lower power



Insufficient

power



*Please

recharge in time when the power is low.

Functions overview:

- 1、 Possess large storage capacity :
2GB/4GB/8GB;
- 2、 Super long recording time;
- 3、 Possess music play function;
- 4、 Break code screen;
- 5、 Recording (REC) indication;
- 6、 Various sound effect play mode :
00(nature)、 01 (rock) 、 02 (popular) 、

- 03 (classical) 、 04 (mild) 、 05 (Jazz) 、
- 06 (Mega bass) ;
- 7、 All machine cycle;
- 8、 Repeat mode (A-B) :repeat play one part of a file;
- 9、 Delete function : delete existing MP3 music files & audio files; you can delete one single file or all files;
- 10、 Built-in loudspeaker;

HOW TO USE:


- (1) Turn on the power switch in ON position, screen display (OPEN) and battery power display in the bottom right corner of the screen.
- (2) Check to see if the built-in battery is full.

(3) Check to make sure the recording key is turned off before start up the machine to avoid other problems. Turn the power off (Please turn off the power if long time no using)


(1) Move the power switch to turn off the machine when it pauses; the machine will turn off automatically with no operation for 5 minutes.

(2) The machine will turn off automatically when the power is used up and all recording files will be saved automatically.

(3) **Main function interface**

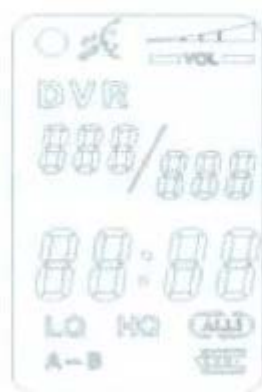


Recording

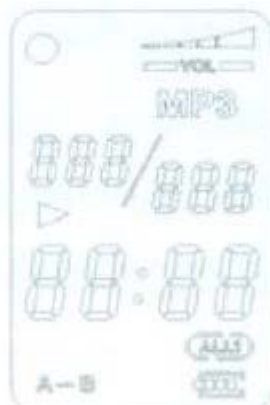


Music

Recording : (U-Voice)

In whatever status, press “REC” to start recording and press “play” to pause(recording indicating light blink); in recording condition, press “REV” to save the recording file and then press “play” to play the recording file.

1、 When the recording file stops or pauses, short press “M” and then short  press “Next” to see that the LED recording indicator light open or close and then press “play” to confirm.

2、 When the recording file stops or pauses, short press “M” twice, the screen displays then short press “NEXT”  to choose HQ or LQ recording mode, and then short press

“Play” to confirm. HQ is high quality recording mode and LQ is long time recording mode.

3.Voice control setting (VOR)

When the recording file stops or pauses, short press “M” three times, screen displays VOR and then short press “NEXT” to choose open VOR function or not, and then short press “Play” to confirm.

A Set VOR open, the machine will check automatically, and recording will pause if there is no voice or the voice is not sound enough, and the indicator light blinks.

Remark: If the machine has no recording files, it cannot be switched to this function by pressing “MENU M)

Delete file

In pause or stop play status, long press “M” will come into delete mode, short press “M” again to delete one single file or all files. ONE is single file deletion mode and ALL is all deletion mode, and then short press “Play” to confirm deletion.

Remark: It takes longer time to delete a lager file and please don't turn the power off when you are deleting files.

Play/ Pause

In recording or music play status, press “play” to start playing and press “play” again to pause.

Change file play

In play status, press “PREV/ NEXT” to

change file play.

Music file/ recording file mode switching

In pause/ stop status, long press “V” to do music file and recording file switching.

Volume control

In music file or recording file status, short press “V” volume control key first (cross band in the LCD screen will blink) and then press “PREV/ NEXT” to control volume; the volume symbol band on the screen will also modify, after that, short press “V” (the cross band of the LCD screen will not blink) to retreat from volume control mode.

A - B Repeat

In recording/ music play status, short press “M” once to set the start point A-, the screen

will display A- and B is blinking, then short press “M” once again to set repeating point B, the LCD screen will display A-B to carry out A-B repeat function, and then press “M” again to retreat from repeat function.

Loop setting

In recording/ music play status, long press “M” to display ALL/ OEN/ NOA and then short press “PREV/ NEXT” to choose required cycling mode; ALL in all cycling, OEN is single cycling and NOA is no cycling, press “Play” to confirm.

EQ function

In music play status, long press “M” and then short press “M” once, LCD screen displays EQ 00(nature), 01 (rock), 02

(popular), 03(classical), 04(mild), 05(jazz), 06(mega bass), and then short press “PREV/NEXT) to choose the required EQ mode, short press “play” to confirm your choice.

Remark: recording format doesn't support EQ function.

Formatting

1、Formatting, connect the voice recorder with computer by USB interface to format the voice recorder.

2、Formatting in any system of the computer, it's the same with formatting the hardware and software (choose the USB device) and format it.

Remark: there is difference between the marked storage capacity and the actual

storage capacity, which is normal since the system programs of the machine itself occupy the storage capacity.

Specifications (Recording time is just for reference)

Items	Specifications		
Storage capacity	1GB	2GB	4GB
HHQ , high quality	330	660	1320
Standard LP	2150	4230	8460
Frequency	20HZ-20KHZ		
MAX. output	300MW		
Storage medium	Embedded flash		
MIC	Non-oriented capacitor MIC		

External output	Earphone 3.5 stereo headset jack
	USB USB2.0 full speed
Recording bit rate	HQ 384KBPS
	LQ 64KBPS
Size	83MM*20MM*14MM
Weight	About 40G(battery included)

Declaration

May all users backup data themselves, the company is not responsible for any personal data loss or damage caused by wrong operation of software, hardware and maintenance; the company takes no responsibility on the accidental damage that may occur in the using process or compensation claimed by a third party.